

MCII[®]

Tempatrol[®] Microprocessor Control and Diagnostic Settings

Control Settings

Power Up Temperature

Unit reads box temperature.

To read set temp, press temp.

To change temp, press temp up/down.

Temp setting can be:

Refrigerator 34°F to 45°F (recommended 36°F to 40°)

Freezer - 5°F to 10°F

(recommended setting at 0°)

Press reset or temp to return to normal display

Defrost

A, 3, 4, 6 or 8 will display. A=Auto (Light Usage Only)

- 3,4,6 or 8 = # of defrosts per 24 hour period.
- Control will space evenly over a 24 hour period.
- Factory sets defrost at "4"

To Change:

1. Press Defrost
2. Press up/down
3. If you selected #, press defrost again.
4. Time of first defrost will appear
5. Press up/down to change time.
6. Press defrost/reset.

To stop a defrost press reset

For manual defrost press defrost time at the same time

Time of Day

1. Press time
2. Press up/down
3. Press time/reset.
Time of day should be reset anytime there is a power interruption.

Clean Condenser Light

- Lights ever 90 days.
- Press reset to clear

Door Ajar Light

- Light on immediately, after one minute
- Temperature flashing
- Beep - after three minutes

Flashing Temp Display Overtemp

- Freezer reaches 32°F
- Refrigerator reaches 65°F
- Check product

Long Duty Cycle

- One hour continuous compressor run, without opening doors.
- Condition will stop if reset is pressed, door is opened, compressor shuts off.
- Check product.

Check System

If "Check Systems" light comes on, call Delfield's Service Department at **1-800-733-8821**.

Diagnostic Control Settings

STAGE ONE (down=time then temp)

- 000-No problem
- 001-Check refrigerant (press time)
- 002-Turn on compressor (press time)
- 003-Turn on lights (press time)
- 004-Turn on defrost heater (press time)
- 005-Preset factory code (press time)
- 006-Preset factory code (press time)
- 007-Check control

STAGE TWO(defrost) (use up/down)

- 000-Temp scale F or C
- 001-Turn evaporator fan (press time)
- 002-Turn on compressor (press time)
- 003-Turn on lights (press time)
- 004-Turn on defrost heater (press time)
- 005-Preset factory code (press time)
- 006-Preset factory code (press time)
- 007-Preset factory code (press time)
- 008-Clear old fail codes (press time)
- 009-Preset factory code (press time)
- 010-Clear old fail codes (press time)
- 011-Clear old fail codes (press time)
- 012-Clear old fail codes (press time)
- 013-Clear old fail codes (press time)
- 014- 015-Clear old fail codes (press time)
- 016-Check VFD (press time to light entire display)

STAGE THREE

Changing factory codes while holding "time" Use up/down to change numbers

FACTORY CODES (as seen in Stage Two)

Always consult factory before adjusting Factory Codes

- 005-Defrost temp limit (40° to 70° to no limit)
- 006-Defrost time limit (15-19 minutes to no limit)
- 007-Fan delay cut-in temp (10° to 50° to no delay)
- 009-Control lock (lock or unlock)
- 010-Over temp alarm (over set point for 60 minutes or 5°, 10° or 15° over the set point)
- 011-Power up display (temp, flashing temp or flashing time)
- 012-Basic function (refrigerator or freezer)
- 013-Differential (± 3 , ± 2 , ± 1)
- 015-Temp range limits (between -20° to 60°F)

By adjusting these codes, control can be adapted for almost any application.

[Back to top](#)



This site is optimized for Netscape 4.0+ and Microsoft Internet Explorer 4.0+





Copyright © 2000 Delfield All rights reserved. Terms Of Use
Questions and comments to: info@delfield.com